



Note 1: The insert point can be opened and closed by this switch at the front panel.



Note 2: **The Monitor Source Point** can be chosen by the DIP switch at the back panel

When the unit is in Digital Mode:
 OFF (default): Monitor from D/A, as shown below. ON: Monitor from Insert Point Return

When the unit is In Analog Mode:
 OFF (default): Monitor from AUX LINE IN 3/4. ON: Monitor from Insert Point Return

