



ROSTEC LMA8

8-channel Professional Mic/Line Preamplifier

Programming of the push-button response time

The INSERT and +48V push buttons on the front panel are tactile toggle switches. They can be programmed to 6 different response times: 32 msec, 63 msec, 125 msec, 250 msec, 500 msec or 1 second.

The preferred response time depends on the temperament of the operator. Default factory setting is 250 msec, which is suitable for most situations.


The unit is switched into programming mode by holding down the CH8 INSERT while powering up. The response time is selected by pressing the CH1 to CH6 INSERT switches. The chosen setting is indicated by the corresponding INSERT LED and is immediately saved into memory. No need to do anything special.

To exit the programming mode, press CH7 INSERT or turn the power off or wait 15 seconds for automatic exit.


The graphical representation on the next page illustrates the procedure.

LMA8 Mic/Line Preamp


Step 1: Turn the unit off

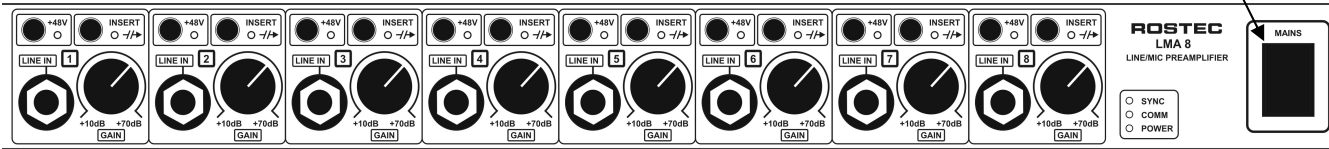

Step 2: Hold down CH8 INSERT switch while turning the unit on.

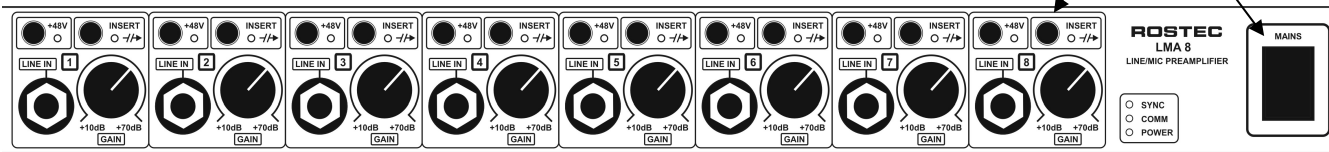


Step 3: The INSERT LEDs on channels 1 to 6 will flash 5 times, indicating that the unit is in programming mode

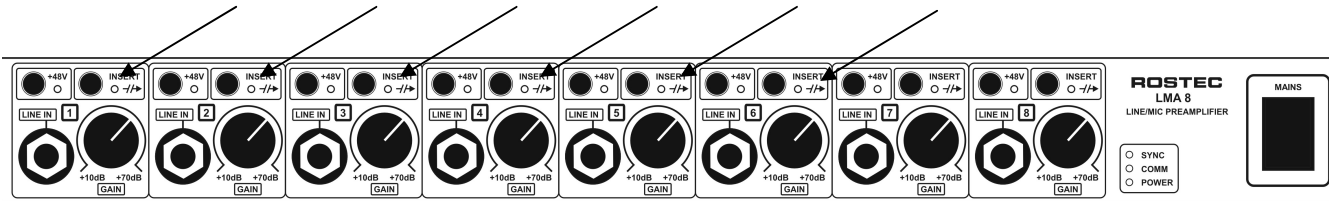

Step 4: Press the INSERT switch on channels 1 to 6 to select the response time. The INSERT LED will light up indicating the selected response time. The setting is immediately saved into memory.

CH1: 32 msec, CH2: 63 msec, CH3: 125 msec, CH4: 250 msec, CH5: 500 msec, CH6: 1 sec

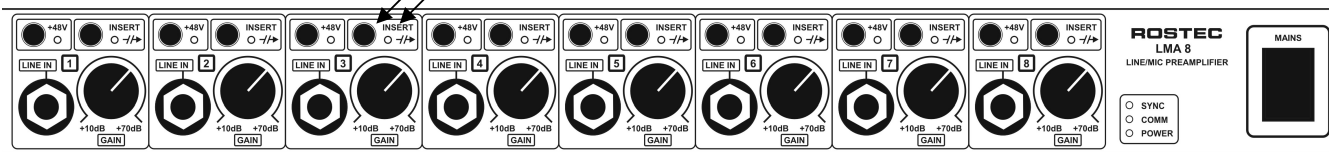

Step 5: There are 3 ways to exit. Press CH7 INSERT or turn the power off or wait 15 seconds for automatic exit.

